

Upgrading Firmware

1. Run the XLINST.EXE application
2. Install “Firmware”, not printer driver.
3. Engraver will ask you to confirm installation, choose yes.
4. The engraver will reboot on its own.
5. Go to System Option Menu, you should see the updated firmware.